


Alignment coupler terminals ECM (harness side)

A705H11102002

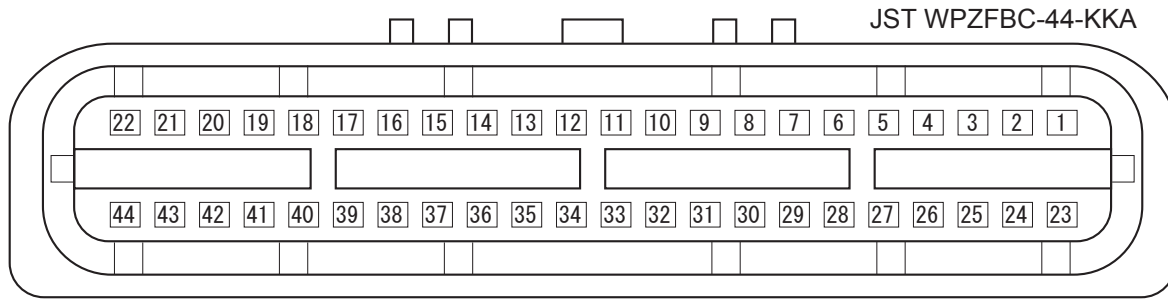

I705H1110115-01

NO. TERMINAL	DESCRIPTION	NO. TERMINAL	DESCRIPTION
(1)	Power Supply	(23)	Backup Power
(2)	Sensor Signal TO (TOS)	(24)	Sensor Signal ECT (ECT)
(3)	Sensor Signal CKP (CKP+)	(25)	Sensor Signal IAT (IAT)
(4)	Sensor Ground (E2)	(26)	—
(5)	Sensor Signal TP (TP)	(27)	—
(6)	Sensor Signal IAP (IAP)	(28)	—
(7)	Sensor Signal HO2 (HO2)	(29)	Sensor Signal STP (STP)
(8)	Ground ECM (E1)	(30)	Starter Relay
(9)	Sensor Signal CKP (CKP-)	(31)	SDS
(10)	—	(32)	Mode Selector
(11)	Power Source for Injectors (VM)	(33)	Speed Sensor
(12)	Signal STVA (STVA 1A)	(34)	Signal Motor Valve ISC (ISCA 1B)
(13)	Signal STVA (STVA 1B)	(35)	Signal Motor Valve ISC (ISCA 1A)
(14)	Power Source for Sensors (VCC)	(36)	Signal Motor Valve ISC (ISCA 2B)
(15)	Signal motor valve ISC (ISCA 2A)	(37)	Instruments Communication
(16)	Signal STVA (STVA 2B)	(38)	—
(17)	Signal STVA (STVA 2A)	(39)	Immobilizer Communication (For E-02, 19, 24, 54)
(18)	—	(40)	Immobilizer Communication (For E-02, 19, 24, 54), Signal Power
(19)	Fuel pump relay (Relay FP)	(41)	—
(20)	Fuel Injector	(42)	Tacho
(21)	Sensor Heating HO2	(43)	Ground ECM (E1)
(22)	Ignition COIL	(44)	Ground ECM (E3)